 



ECOLAB PREMIUM DISHWASHER TEMP LABELS

Ecolab Premium Dishwasher Labels are self-adhering, waterproof, color-changing labels that measure the surface temperature of dishware in dish washing machines. When affixed to a dish surface they indicate whether or not the proper sanitation temperature has been reached.


- ▲ Label removes easily and leaves no residue
- ▲ Irreversible color change once temperature has been reached
- ▲ Accuracy +/- 2°F



 
Reorder No. 40905-01-11
(160°F/170°F/180°F)
16 Labels



Reorder No. 40902-01-11
(160°F)
24 Labels

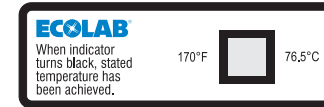

Reorder No. 40902-03-11
(170°F)
24 Labels

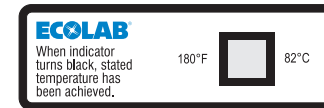


Reorder No. 40902-02-11
(180°F)
24 Labels



Apply the label to the thickest dish or utensil to be washed. Ensure that the contact area is clean and dry.



Place labeled dish/utensil in dishwasher and run dishwasher.

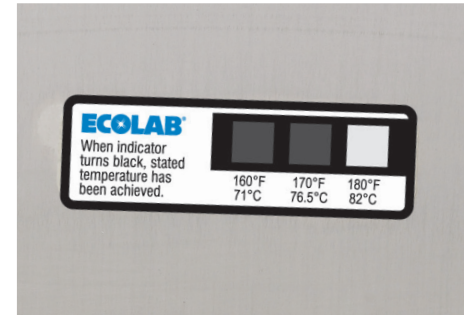

Read label - Label should turn from silver to black when surface temperature reaches rated temperature.



Remove label and attach to dishwasher documentation.

To order, contact your Ecolab Sales Representative, call 800 321 3687 or go to foodsafety.ecolab.com

ECOLAB FOOD SAFETY SOLUTIONS
2152 Riverbend West Dr.
Fort Worth, Texas 76118
foodsafety.ecolab.com
800 321 3687

© 2020 Ecolab USA Inc. All rights reserved.



Food Safety Solutions